



HyVac 1 Base Pump 91000-000

Parts Listing Based on Exploded View Diagram

<u>Item</u>	<u>Description</u>	<u>Part#</u>	<u>Qua</u>
1	Exhaust Dome	P673891	1
2	Exhaust Cover Screws	P110067	5
3	Exhaust Port Plug	P32000	1
4	Case Cover	P60013	2
5	Cover Gasket	P35014	6
6	Oil Baffle Screws	P110112	2
7	Oil Baffle	P65003	1
8	Oil Sight Glass	P35291	1
9	Case	P60118	1
10	Drain Plug	P32000	1
11	Drain Valve	P13124	1
12	End Plate Bolt	P110071	3
13	End Plate	P60033	1
14	Dowel Pin, Short	P29173	1
15	Shaft Key	P65004	1
16	Shaft	P60053	1
17	Valve Retainer Screw	P110016	2
18	Ball Valve Retainer Plate	P65001	1
19	Valve Ball	P29000	2
20	Tension Spring	P28002	1
21	Spring Pins	P63456	1
22	Lever Arm, Spring	P67385	1
23	Lever Arm Bushing	P63001	2
24	Exhaust Vane	P60034	1
25	Exhaust Ring	P60025	1
26	Dowel Long Pin	P29172	1
27	Rotor	P60031	1
28	Dowel Pin Short	P29173	1
29	Center Plate	P60032	1
30	Intake Ring	P60063	1
31	Intake Vane	P60027	1
32	Mounting Plate Screws	P110177	6
33	Mounting Plate	P60014	1
34	Bolt-Large	P110018	1
34A	Bolt-Medium	P110074	1
35	Bolt-Small	P110062	2
36	Trap Gasket	P27136	1
37	Shaft Seals	P36399	2
38	Intake Nipple	P67400	1
39	Intake Nipple Bushing	P32101	1
40	Trap Plate	P60764	1
41	Trap Plate Screws	P110177	8
42	Pulley Bushing	P29269-1	1
43	Pulley	P29269	1
44	Pulley Set Screw	P110068	1

<u>Item</u>	<u>Description</u>	<u>Part#</u>	<u>Qua</u>
Not Pictured			
50	Base	P65497	1
51	Beltguard/Mounting Panel	91135-000	1
52	Electric Cord	P19300	1
55	Motor	P24236	1
57	V-Belt	P27113	1
60	Exhaust Cover w/o Dome	P67390	1
62	Key Spacer	P63010	1
63	Nut Packing	P76000	1
64	Packing	P35445	1
65	Plastic Cap	P26184	1

Questions on any parts can be directed to HyVac Products, Inc. at 1-800-628-0850.