



# Pressovac Parts List

0 Pressovac No Motor or Base		90540-001 90500-000	
Item	Description	Part Number	Qua
1	Exhaust Dome	P67389	1
2	Exhaust Cover Screws	P110067	5
3	Exhaust Port Plug	P32000	1
4	Case Cover	P60013	2
5	Cover Gasket	P35014	6
6	Oil Baffle Screws	P110112	2
7	Oil Baffle	P65003	1
8	Oil Sight Glass	P35291	1
9	Case - with name plate & Oil Level Window	P60118	1
10	Drain Plug	P32000	1
11	Drain Valve	P13124	1
12	Screw Shaft	P29004	3
13	Washer Shaft	P78700	1
14	Shaft	P60088	1
15	Shaft Key	P65004	1
16	Spring Pin	P63456	1
17	Lever Arm Bushing	P75506	1
18	Lever Arm	P67386	1
19	Tension Spring	P28005	1
20	Lever Arm Screw	P67386	1
21	End Plate	P60016	1
22	Dowel Pins	P29173	1
23	Rotor	P60017	1
24	Ring	P60015	1
25	Vane	P60019	1
26	Check Valve Screw	P110016	2
27	Check Valve Washer	P110040	2
28	Check Valve Cage	P60005	1
29	Check Valves	P65007	3
30	Check Valve Retainer	P65006	1
31	Mounting Plate Screws	P110177	6
32	Mounting Plate	P60014	1
33	Shaft Collar Screw	P110188	1
34	Shaft Collar	P60024	1
35	Long Bolts	P110074	2
36	Trap Plate Gasket	P27136	1
37	Shaft Seals	P36399	2
38	Intake Nipple	P32168	1
39	Trap	P60764	1
40	Pump Pulley	P29269	1
41	Pump Pulley Set Screw	P110177	1
42	Beltguard/Mounting Panel (Not Pictured)	91135-000	1
43	Electric Cord (Not Pictured)	P19300	1
44	Motor (Not Pictured)	P24236	1
45	V-Belt (Not Pictured)	P27113	1
46	Exhaust Cover w/o Dome (Not Pictured)	P67390	1
47	Key Spacer (Not Pictured)	P63010	1
48	Plastic Cap (Not Pictured)	P26184	1